

REPLACING THE BATTERY

The LED will not flash during transmission if the battery is low. Replace the battery as follows.

1. Remove the screw from the case back, then remove the case back.
 2. Insert the blade of a small screwdriver under the battery as shown.
 3. Twist the screwdriver to release the battery.
 4. **IMPORTANT:** After removing the old battery, wait 1 minute before installing a new battery. With the Positive (+) end of a new battery facing UP, insert the battery as shown, sliding it under the gold tab, then pressing down to snap into place.
- IMPORTANT:** Positive (+) end must face up.
Use Panasonic CR2032, Duracell DL2032, or SENER CR2032 lithium battery only.
5. Replace the case back and replace the screw to secure the case.



- Improper installation will result in damage to the battery.
- Do not remove the printed circuit board.

Failure of Replaceable Batteries

This wireless key has been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life.

If the batteries need to be replaced, this device reports a low battery condition to the control panel as a trouble condition when a button is pressed. In addition the LED will not flash when a button is pressed. However, if the device is unused for a long period of time, it may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition for the lifetime of the product.

IMPORTANT! This wireless key is intended as a convenience to the user and should not be considered as a life safety device. If life safety is important, please select a supervised wireless key (e.g. type 5802MIN).

SPECIFICATIONS

Unit Dimensions: 2.25" x 1.25" x 0.5"
(57mm x 31.75mm x 12.7mm)

Battery: 3V, 210mAh, Panasonic CR2032, Duracell DL2032, or SENER CR2032

IC MODEL No. 5834



N219

 
WARRANTY INFORMATION

For the latest warranty information, please go to:
<http://www.security.honeywell.com/hsc/resources/wa>

DOCUMENTATION AND ONLINE SUPPORT

For the latest documentation and online support information, please go to:
<https://mywebtech.honeywell.com/>


Removing the Battery

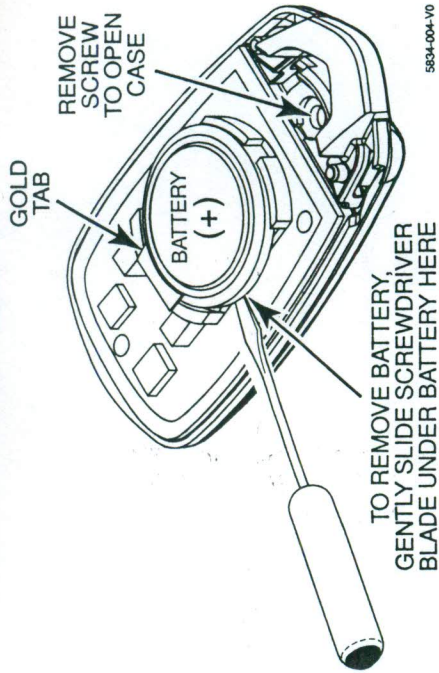


5834-004-V0

Installing the Battery

 INSTALL WITH POSITIVE (+)
SIDE UP. SLIP BATTERY
UNDER GOLD TAB THEN
PRESS DOWN

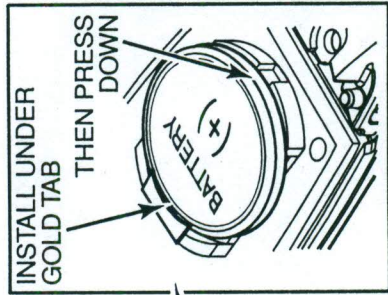

 IMPORTANT
POSITIVE (+)
SIDE MUST
FACE UP

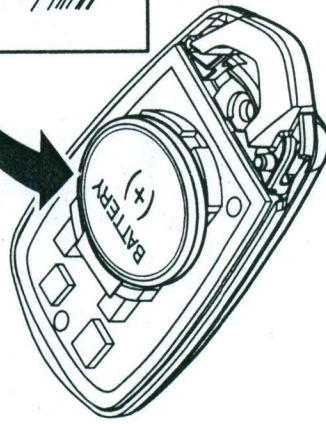

5834-005-V0